



# RC1 RS232 Control Document

---

## Protocol

Baud 57600  
Parity None  
Data Bits 8  
Stop Bits 1  
Flow control None

## Control Commands

Table 1 provides a list of all of the available control codes for the product in both hexadecimal and ASCII formats. In the ASCII column [CR] is used to denote the carriage return character.

Function	Command (Hex)	Command (ASCII)
Macro	23 52 4D x Where x is the preset number in ASCII notation, i.e. a value of 21 is 32 31 and a value of 87 is 38 37.	#RMx Where x is the macro number from 1 to 100

Table 1, Control codes